


## Exploded assembly drawing TTV 4500 / TTV 4500 HP

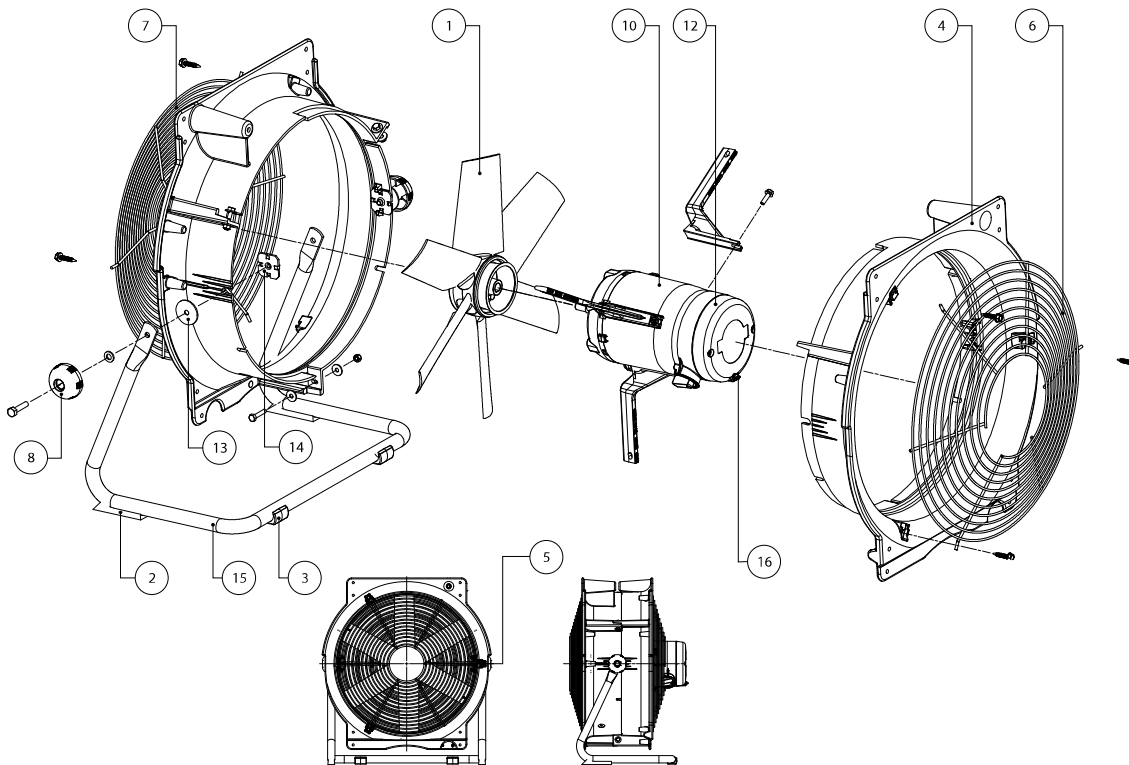

### Info

The position numbers of the spare parts differ from those describing the positions of the components mentioned in these instructions.



## Spare parts list TTV 4500 / TTV 4500 HP


No.	Spare part	Article number
1	fan rotor TTV4500	7310000634
2	rubber feet back TTV4500	7300001246
3	rubber feet front TTV4500	7300001245
4	housing TTV4500/HP	7310000936
5	safety clamp grid BVVP0023 TTV-series	7310000642
6	safety grid airinlet TTV4500	7242000638
7	safety grid airoutlet TTV4500	7242000639
8	fixing knob TTV-series	7310000710
9	condensator 6 $\mu$ F motor TTV	7140000357
10	motor 4E40 TTV4500	7110000635
11	connector assembly kit TTV-series	7320001271
12	switch TTV4500	7130000628
13	rubber washer TTV 4500	7330001155
14	plastic washer TTV 4500	7310001154
15	tube feet TTV4500	7240000937
16	condense plug	7300001248

**Exploded assembly drawing TTV 7000**



**Info**

The position numbers of the spare parts differ from those describing the positions of the components mentioned in these instructions.

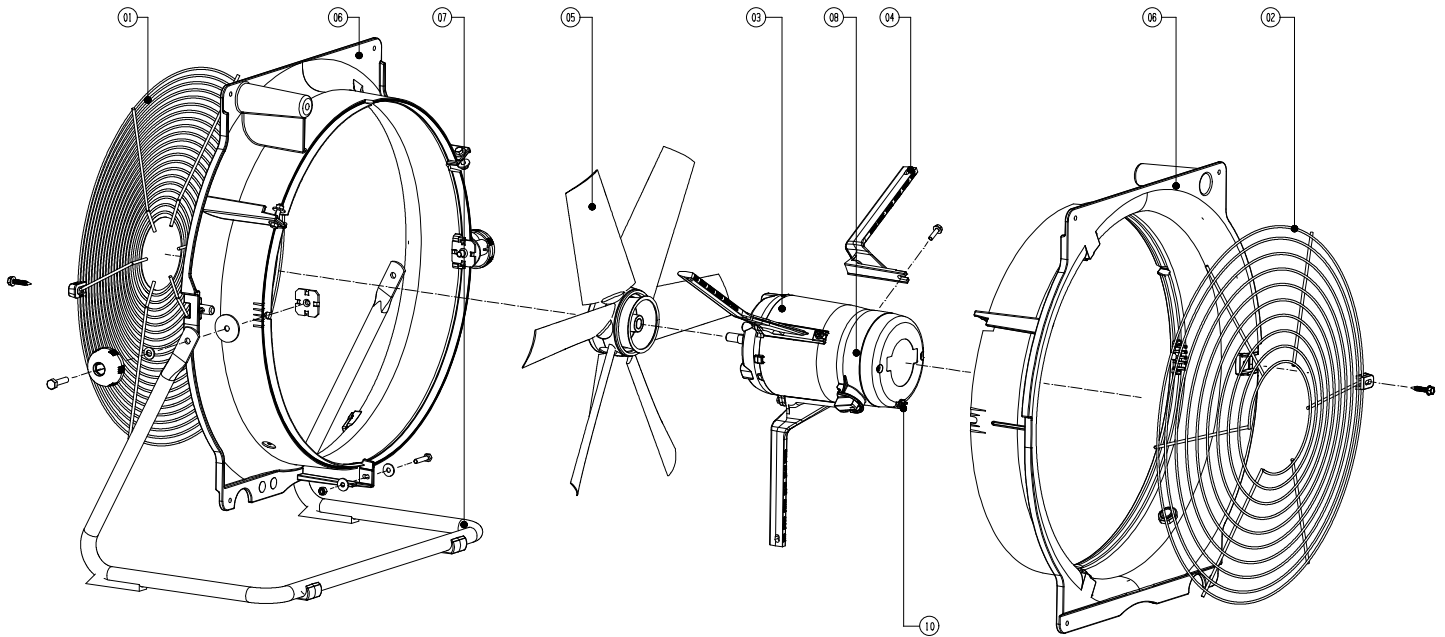

**Spare parts list TTV 7000**

No.	Spare part	Article number
01	wire guard impeller side	7.242.000.646
02	wire guard motor side	7.242.000.645
03	motor	7.110.000.637
04	bracket	*)
05	impeller	7.310.000.633
06	housing (set, 2 pieces)	7310000939 (Fan) + 7310000938 (Motor)
07	frame	7.240.000.939
08	controller (under cap)	*)
10	condense plug	7.300.001.248

\*) on request